



INDOOR BALL LAUNCHER

QUICK-START GUIDE

CanAssist's *Indoor Ball Launcher* is an adaptation of *GoDogGo*, a commercial product that lets the user remotely launch balls in the air. With a push of a single button, the ball launches and lets the user play fetch without having to throw a ball themselves.

CONNECTING TO A POWER SOURCE

Option 1: Plug the provided **AC adapter** into a power outlet.

Option 2: Place six (6) **D-sized batteries** in the *Indoor Ball Launcher's* battery housing.

IMPORTANT

Never operate the ball launcher when using batteries and when connected to the AC power outlet at the same time.

TURNING ON YOUR *INDOOR BALL LAUNCHER*

1. Ensure that your *Indoor Ball Launcher* is connected to a power source.
2. Flip the toggle switch to the ON position.

ACCESSIBILITY SWITCH LAUNCH MODE

1. Turn ON your *Indoor Ball Launcher*.
2. Place tennis balls in the **Ball Bucket**.
3. Connect the **Accessibility Switch** to the **Remote Control**.
4. Place the Accessibility Switch such that the user can easily operate it.
5. Press the Accessibility Switch to launch a ball.

AUTOMATIC LAUNCH MODE

1. Turn ON your *Indoor Ball Launcher*.
2. Place tennis balls in the **Ball Bucket**.
3. Repeatedly press the **SELECT** button on the **Control Panel** to cycle through the following launch intervals: **4-seconds**, **7-seconds**, or **14-seconds**. The selected time will be lit up in red.
4. After a four-second (4-second) safety delay, automatic launching will begin.

NOTES ON SAFE AND PROPER OPERATION

- DO NOT allow people or dogs to stand directly in front of the launch path.
- DO NOT allow people or dogs to touch the sensor switch when the machine is turned ON.
- Wipe off excess wetness and dirt from the ball before loading it into the ball basket.
- Turn OFF the *Indoor Ball Launcher* when not in use.